


Bench scale

Bench scale, used to control the weight of fruit boxes, sacks, paint mixtures, packaging and animals




FEATURES:

- Tubular structure in painted steel, with pan in stainless steel and a stainless steel column.
- Aluminum load cell with protection IP65.
- Column of 649 mm with a base for anchoring of painted steel (Model P 447 mm).
- 4 adjustable feet in height, up to an increase of 13 mm.
- Cable length of the platform-indicator: 1.200 mm (up to 1.370 mm, depending on the model).
- EC pattern approval.
- Approval type at 3.000 divisions OIML class III.
- ABS indicator, model BR16.
- IP54 protection.
- Spill-resistant keyboard with 6 keys of functions and switch on and switch off keys.
- Backlight LCD display with 6 digits of 40 mm.
- Backlight of the display with 3 types: automatic, activated and deactivated.
- ABS support for column.
- Holes for wall anchor included.
- Operating temperature range: -10°C +40°C.
- Power supply with adaptor AC/DC 240Vac 50Hz.
- Rechargeable internal battery 6V/4Ah.
- Battery life with activated back-lightning and RS232 ON: 80 hours approx.
- Battery life with back-lightning disabled and RS232 OFF: 320 hours approx.
- Units: kg.
- Unique range/ Multi range.
- Auto switch off (programmable from 1 to 99 minutes).

FUNCTIONS:

- Accumulation
- Totalization
- Piece counting
- Zero
- Four modes of hold: deactivate, animal in motion, peak value, stable weight and stable weight with auto cancel in zero
- Control of weight and pieces (limits function) with visual signal and alarm
- Three speeds of the converter AD (high, medium and low)
- Configurable gravity
- Gross/Net
- Tare

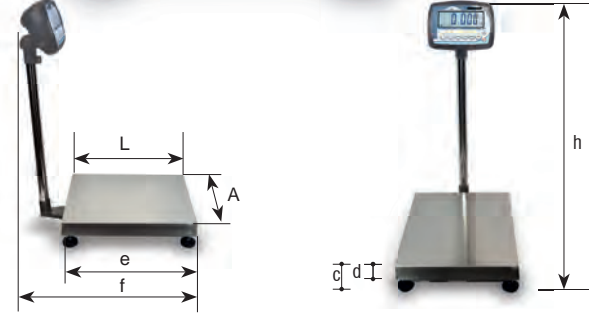

Code #	Pan LxW (mm)	Capacity (kg)	Readout (g)	n Divisions	Packing dim. (mm)	Packing weight (kg)	Certifications		Dimensions (mm)				
							Homologation M	ENAC	c	d	e	f	h
260659	350x450	30	10	15000	840x505x175	12	900018	900001	115	56	576	666	670
260660	350x450	60	20	12000	840x505x175	12	900018	900001	115	56	576	666	670
260661	350x450	150	50	15000	840x505x175	12	900019	900002	115	56	576	666	670
260662	400x500	60	20	12000	883x520x175	13	900018	900001	115	56	626	716	870
260663	400x500	150	50	15000	883x520x175	13	900019	900002	115	56	626	716	870
260664	400x500	300	100	15000	883x520x175	13	900019	900002	115	56	626	716	870
260665	500x600	150	50	15000	980x620x190	19	900019	900002	130	66	716	806	870
260666	500x600	300	100	15000	980x620x190	19	900019	900002	130	66	716	806	870
260667	600x800	300	100	15000	1200x745x190	31	900019	900002	150	82	916	1006	870
260668	600x800	600	200	12000	1200x745x190	31	900020	900003	150	82	916	1006	870

Accessories	
Code #	Accessories description
910034	IMP27 printer
910035	IMP28 printer
260469	Repeater RPT80A with digits of 80mm
910016	Support adapter from column to wall
TMN232	RS232 output